

# Epson - Resetting the Lamp Timer


1172 August 14, 2023 [Projectors](#) 505

## Resetting the Lamp Timer

You must reset the lamp timer after replacing the projector's lamp to clear the lamp replacement message and to keep track of lamp usage correctly.

**Note:** Do not reset the lamp timer if you have not replaced the lamp to avoid inaccurate lamp usage information.

1. Turn on the projector.
2. Press the **Menu** button.
3. Select the **Reset** menu and press **Enter**.

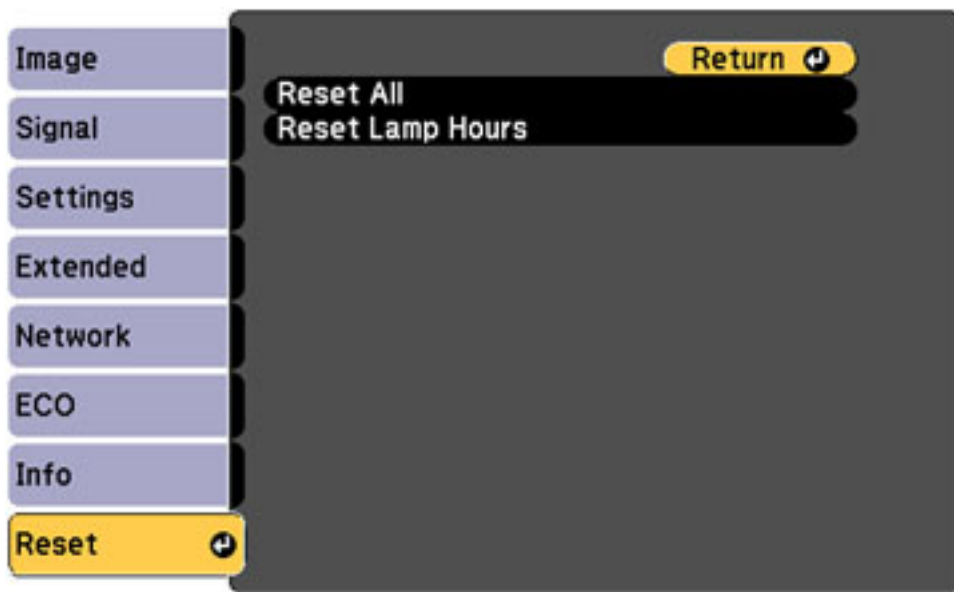

4. Select **Reset Lamp Hours** and press **Enter**. You see a prompt asking if you want to reset the lamp hours.
5. Select **Yes** and press **Enter**.
6. Press **Menu** or **Esc** to exit the menus.

[https://files.support.epson.com/docid/cpd4/cpd40467/source/maintenance/tasks/resetting\\_lamp\\_timer.html](https://files.support.epson.com/docid/cpd4/cpd40467/source/maintenance/tasks/resetting_lamp_timer.html)

Online URL: <https://kb.lawrence.k12.ma.us/article.php?id=1172>