


Epson - Resetting the Lamp Timer

1172 August 14, 2023 [Projectors](#) 305

Resetting the Lamp Timer

You must reset the lamp timer after replacing the projector's lamp to clear the lamp replacement message and to keep track of lamp usage correctly.

1. Turn on the projector.
2. Press the **Menu** button.
3. Select the **Reset** menu and press **Enter**.

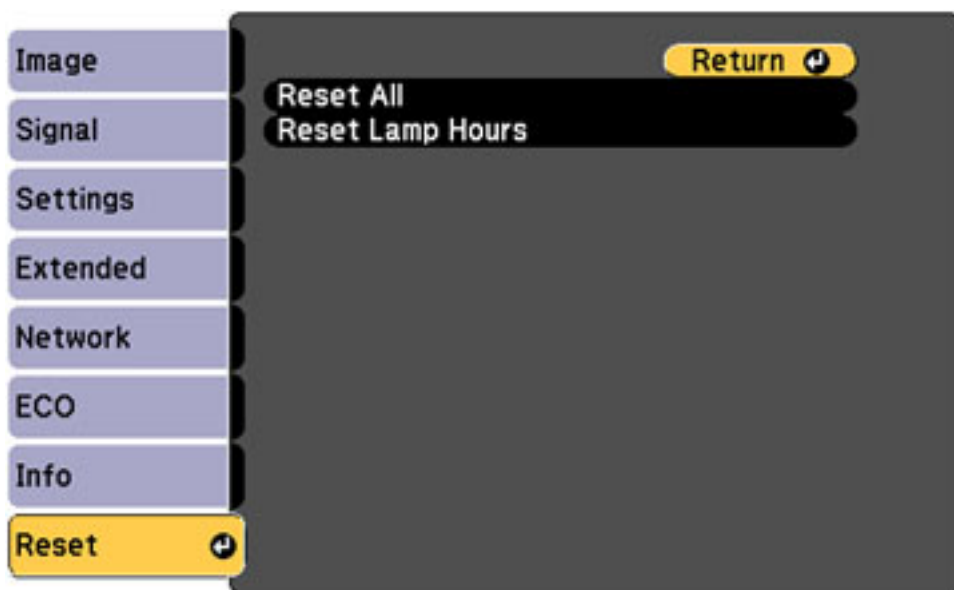

4. Select **Reset Lamp Hours** and press **Enter**. You see a prompt asking if you want to reset the lamp hours.
5. Select **Yes** and press **Enter**.
6. Press **Menu** or **Esc** to exit the menus.

https://files.support.epson.com/docid/cpd4/cpd40467/source/maintenance/tasks/resetting_lamp_timer.html

Online URL: <https://kb.lawrence.k12.ma.us/article.php?id=1172>